



Peladow[®]
CALCIUM CHLORIDE PELLETS
PREMIER SNOW AND ICE MELTER

SPREADER CALIBRATION INFORMATION

SPREADER TYPES

There are three basic types of spreaders available to apply deicers:

- **Broadcast** – Used when covering very large areas, such as wide walkways or parking lots.
- **Bottom-drop** – Used for more narrowed areas, such as sidewalks, or areas with sensitive vegetation nearby.
- **Hand-held** – Used in very small areas and steps.



[MELTRESPONSIBLY.com](https://www.meltresponsibly.com)

USING A SPREADER

A spreader should be properly calibrated before use to accurately deliver the recommended application rate of a deicer. Calibration setting mechanisms are either dials or levers and differ between spreader makes and models.

Various spreader manufacturers tested samples of PELADOW® in their spreaders based on the recommended application rate. Listed below are their recommended settings for the leading spreaders on the market.

PELADOW RECOMMENDED APPLICATION RATE: 28 LBS. PER 1000 FT²

Based on melting a thin sheet of ice at 20° F in 30 minutes.

Always use the least amount necessary. Adjust based on ice thickness and temperature.



SPYKER

DIAL

Recommended Setting: 81
Number of Passes: 2

HANDLE & LOCK

Recommended Setting: 15/16"
Number of Passes: 2



CHAPIN

DIAL

Recommended Setting: 27
Number of Passes: 2

DIAL WITH BAFFLES

Recommended Setting: 13
Number of Passes: 1

LEVER

Recommended Setting: 20
Number of Passes: 4

LEVER WITH BAFFLES

Recommended Setting: 15
Number of Passes: 2



EARTHWAY POLAR TECH

LEVER

Recommended Setting: 27
Number of Passes: 1